


# PDCINT

DIMMING INTERFACE | INTERFACE DE VARIATION | DIMMER INTERFACE  
WIRING INSTRUCTIONS | INSTRUCTIONS DE CÂBLAGE | INSTALLATIONSANLEITUNG




COLLINGWOOD  
LIGHTING

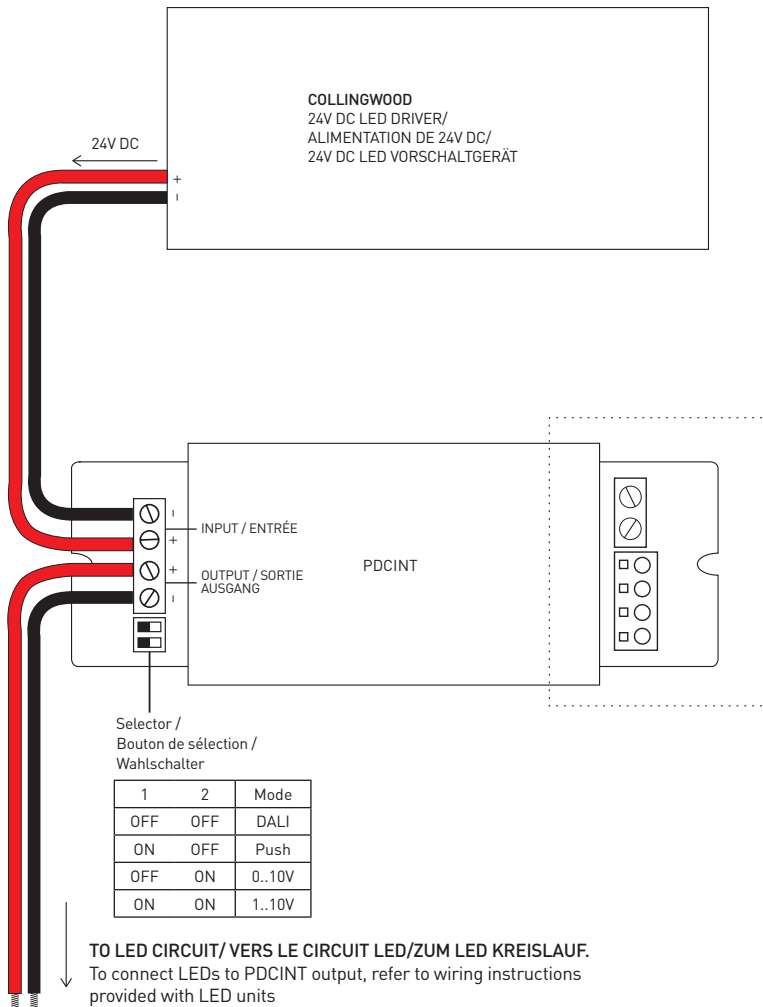


**TO LED CIRCUIT/ VERS LE CIRCUIT LED/ZUM LED KREISLAUF.**  
To connect LEDs to PDCINT output, refer to wiring instructions provided with LED units  
Pour connecter les LED à la sortie PDCINT, se reporter aux consignes de câblage fournies avec les LED  
Um die LEDs an den PDCINT Ausgang anzuschließen beachten Sie die Installationshinweise die mit den Leuchten geliefert werden


## 1. DALI CONTROL / CONTRÔLE DALI / DALI

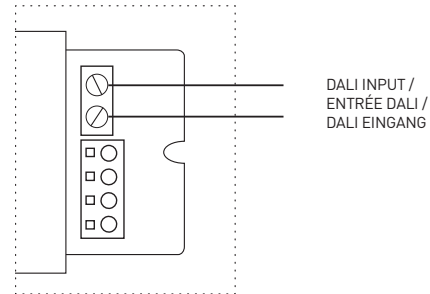

## 2. PUSH TO MAKE DIMMING / VARIATION SUR BOUTON POUSSOIR / WIPPTASTER

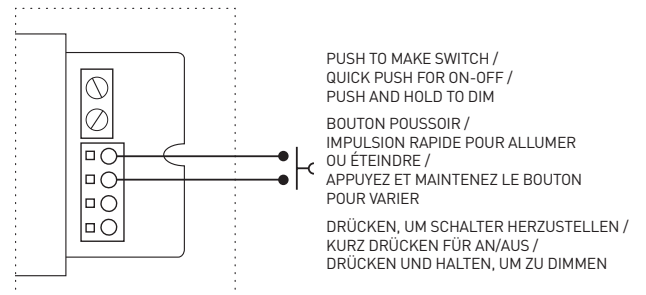

## 3. 1-10V (0-10V) DIMMING / VARIATEUR 1-10V (0-10V) / 1-10V (0-10V)

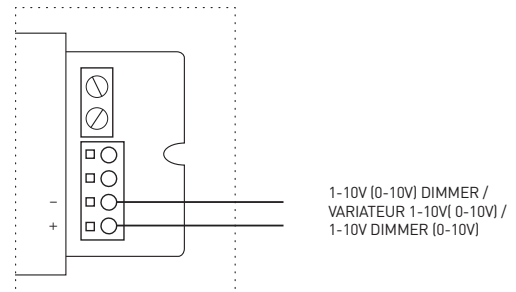

EN

- Connect 24V DC driver output to PDCINT input.
- Connect PDCINT output to LED circuit.  
**NOTE:** Multiple parallel circuits of LED units can be connected up to the capacity of the LED driver.
- Connect control device as appropriate.
  1. Dali control
  2. Push to make dimming
  3. 0-10V dimming
  4. 1-10V dimming
- Ensure selector is in the correct position

FR

- Connectez la sortie 24V de l'alimentation à l'entrée de la PDCINT.
- Connectez les produits LED en sortie de la PDCINT.  
**REMARQUE :** Le raccordement de plusieurs circuits LED en parallèle est limité par la capacité de l'alimentation LED.
- Connectez les systèmes de variation comme il convient.
  1. Contrôle DALI
  2. Variation sur bouton poussoir
  3. Variateur 0-10V
  4. Variateur 1-10V
- Assurez-vous que le bouton de sélection soit correctement positionné

DE

- Verbinden Sie den Ausgang des 24 V DC Vorschaltgerätes an den Eingang der PDCINT Schnittstelle.
- Verbinden Sie den Ausgang der PDCINT an den LED-Stromkreis.  
**HINWEIS:** Abhängig von der Leistung des vorschaltgerätes, können mehrere parallel geschaltete LED Kreise angeschlossen werden.
- Verbinden Sie das Steuergerät entsprechend.
  1. DALI
  2. Wipptaster
  3. 0-10V
  4. 1-10V
- Stellen Sie sicher, dass der Wahlschalter in der richtigen Position ist

EN t +44 (0) 1604 495 151 f +44 (0) 1604 495 095 e sales@collingwoodgroup.com w collingwoodlighting.com

FR t +33 (0) 4 816 816 10 f +33 (0) 4 816 816 11 e ventes@collingwoodgroup.com w collingwoodlighting.com

DE t +49 (0)89 411123 777 f +49 (0)89 411123 778 e verkauf@collingwoodgroup.com w collingwoodlighting.com

Collingwood Lighting, Brooklands House, Sywell Aerodrome, Sywell, Northampton NN6 0BT, United Kingdom

CWW 6091 V3